




SAVOY
HOUSE

ITEM NO.: 1-9106-12

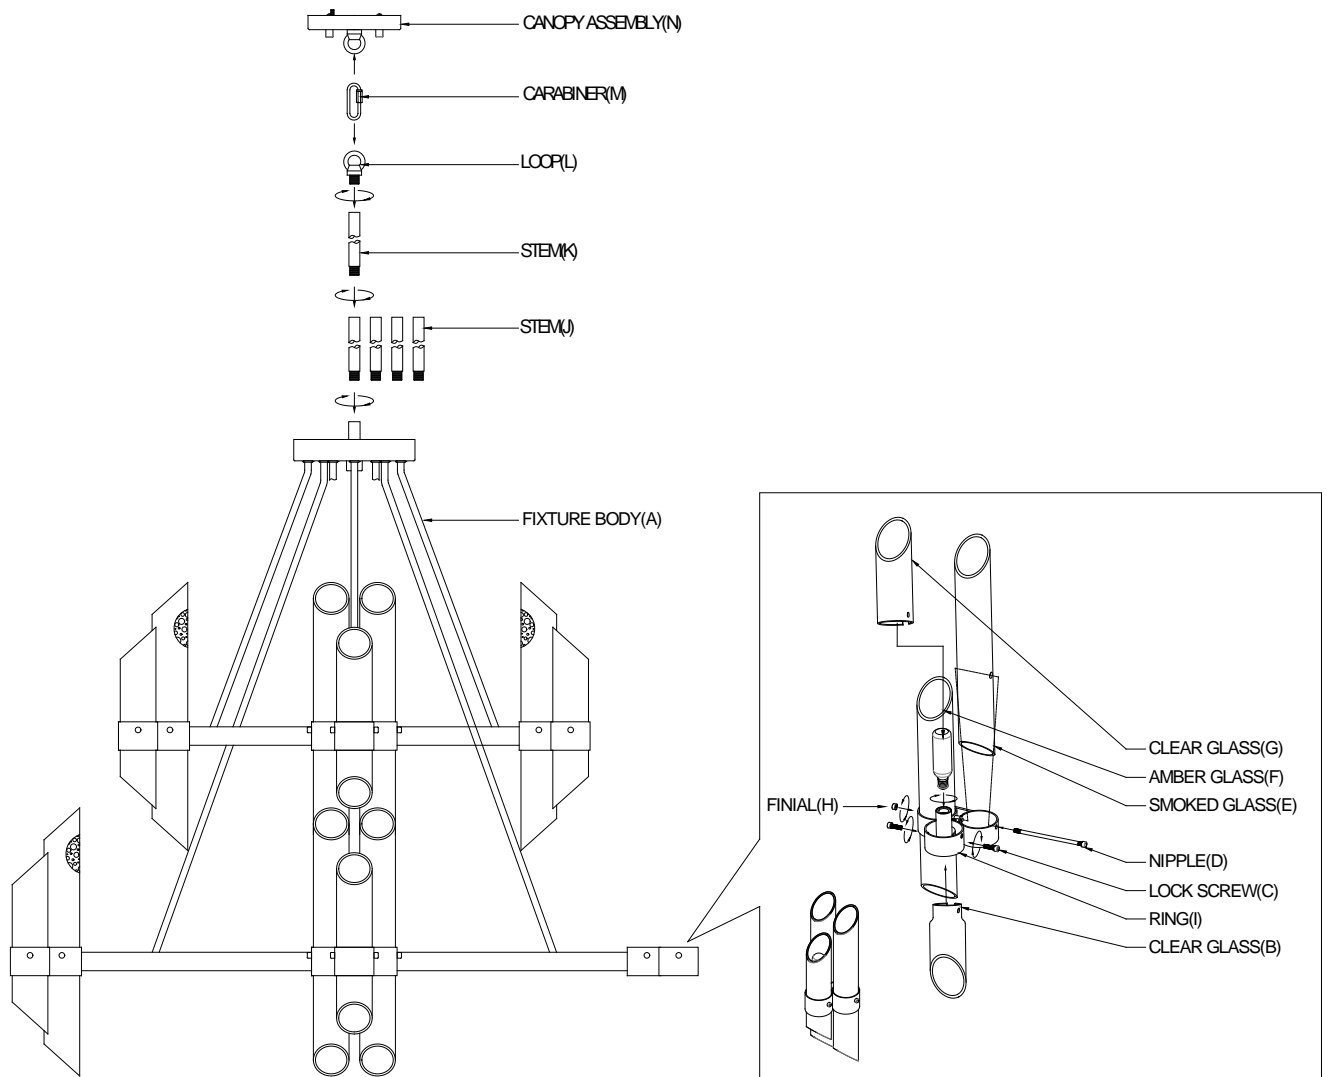

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Unravel the supply power and ground wires and pass them through the stems (J), stem (K), loop (L) and canopy assembly (N).
4. Thread the bottom of stem (J) onto the fixture body (A). Repeat process for remaining stems (J) and stem (K). Hand tighten until snug. Install the loop (L) onto the top of stem (K).
5. Use carabiner (M) to connect the loop (L) to the loop on the canopy assembly (N) and twist the locking mechanism to secure.
6. Remove the finial (H) from the nipple (D). Place the long end of the amber glass (F) facing up on the left ring (I) and the long end of the smoked glass (E) on the right ring (I). Confirm that the holes on the amber glass (F) and smoked glass (E) align with the holes on the ring (I). Pass the nipple (D) through holes of the ring (I), amber glass (F) and smoked glass (E), secure with finial (H). Hand-tighten until snug.
7. Install proper bulbs (not included) into each socket referring to the markings and/or labels on the fixture for maximum wattage.
8. Remove the lock screws (C) from the ring (I). Place the clear glass (G) to the top on the ring (I), place the clear glass (B) to the bottom on the ring (I). Confirm that the holes on the clear glass (G) and clear glass (B) align with the mounting holes on the ring (I). Pass the lock screws (C) through mounting holes on the ring (I), the holes on the amber glass (H) and the smoked glass (E). Hand-tighten until snug.
9. Refer to the additional installation instructions included with the product for wiring and installation.
10. Restore power to the installation point and retain this sheet for future reference.